 



Yealink T26P/T28P Instructions

1. Making Calls


i. Outside Calls

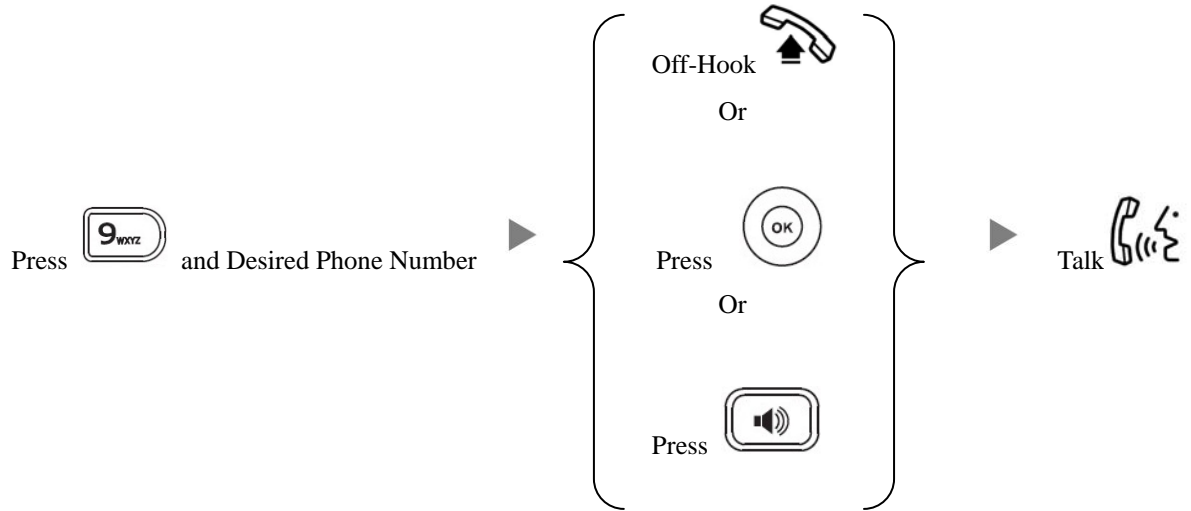

 ii. Calling Other Extension

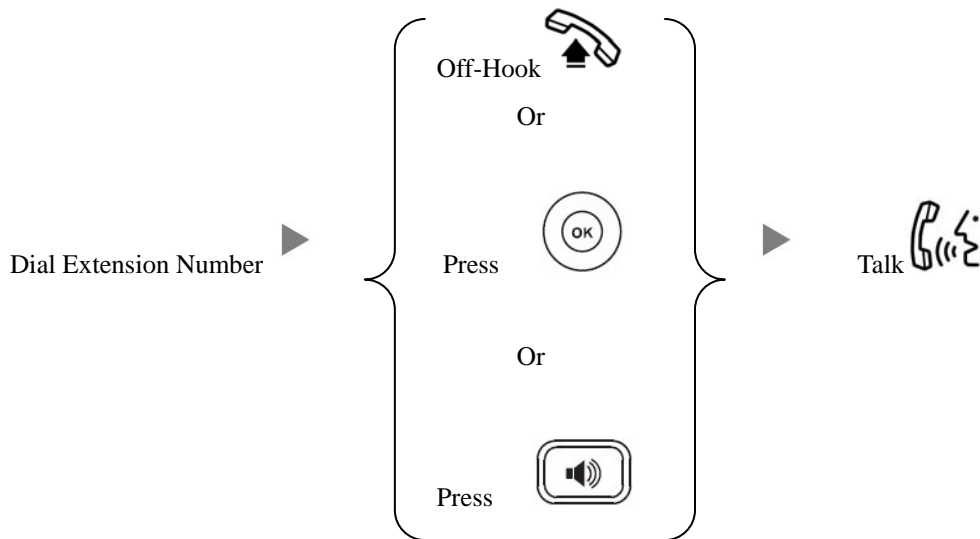

 2. Answering Calls

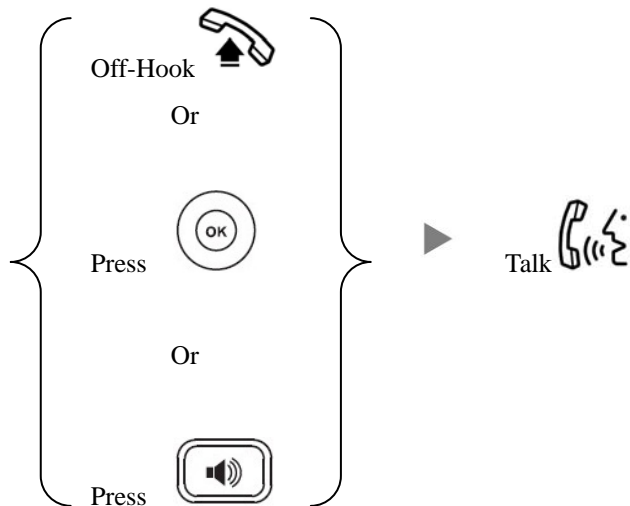


3. Transferring a Call / Call Transfer

i. Blind / Unattended Transfer



 ii. Supervised / Attended Transfer



4. Holding a Call

i. To Hold



ii. To Retrieve a call (Call Hold retrieve)



5. Making a conference (Conference Call)

i. To Establish a Conference



ii. To Leave a conference and talk to the original person



 
iii. To Leave a conference and talk to the 3rd person




iv. To Leave a conference




6. Checking Voice Mail

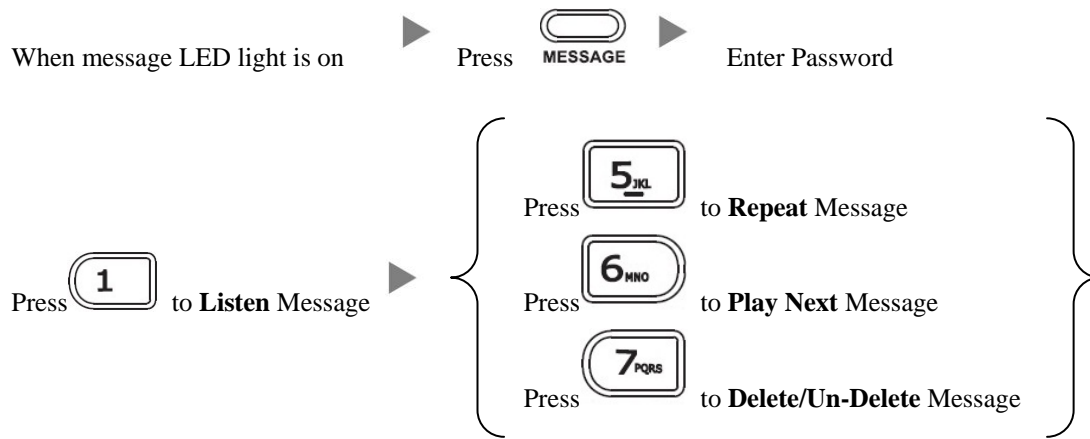

 7. Voice Mail Setup

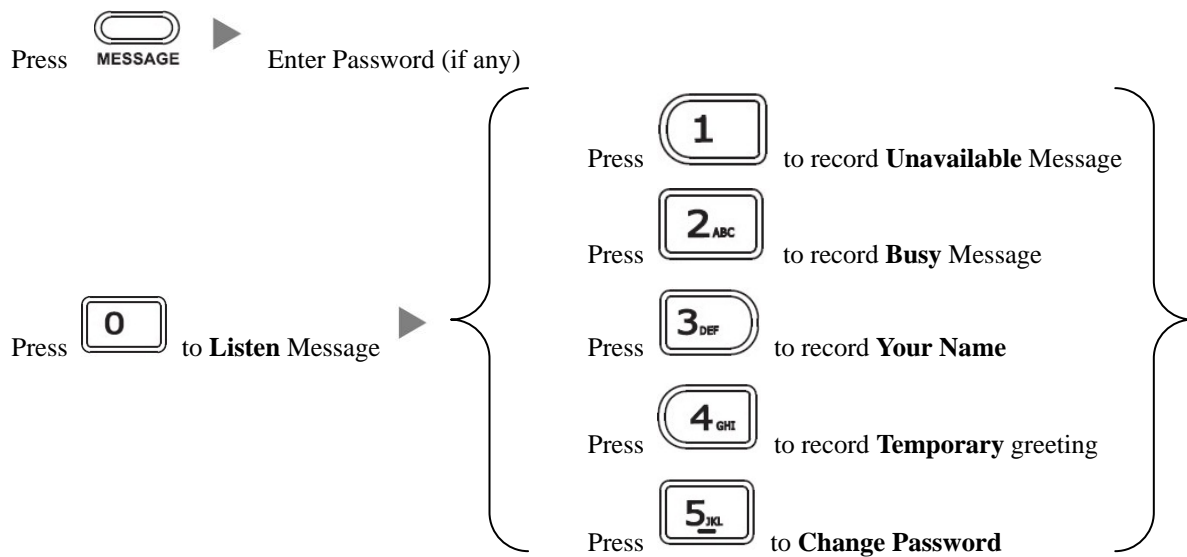

8. Checking Call History

I. Press , Dialed calls will be listed .

II. The LCD screen displays the call list.

III. Press  or  to switch between **Dialed Calls, Received Calls, Missed Calls and Forwarded Calls.**

Icons on top:






Represents Dialed calls

Represents Received calls

 
Represents Missed calls

Represents Forwarded Calls


IV. Press  or  to select the desired entry and press  to dial out.

9. Forward Call


i. To set up Time Limited / No Answer Mode

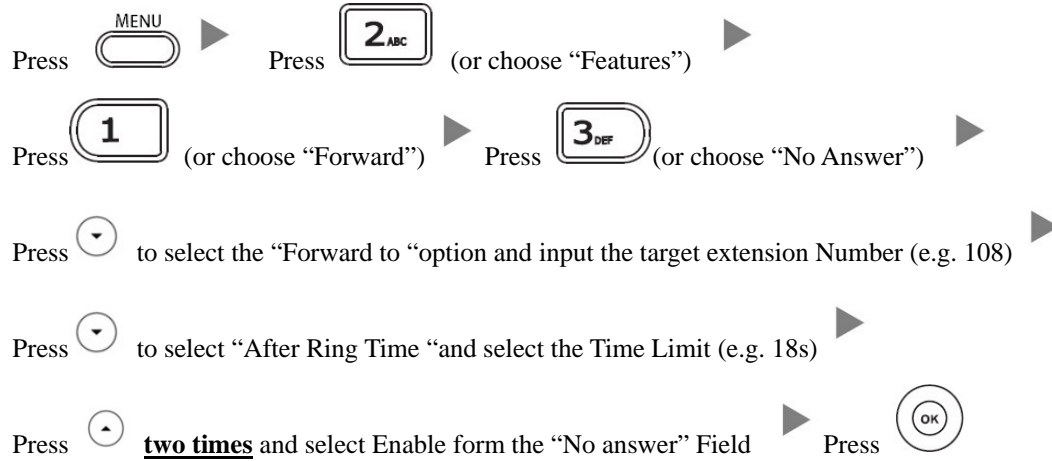

ii. To set up Busy Mode

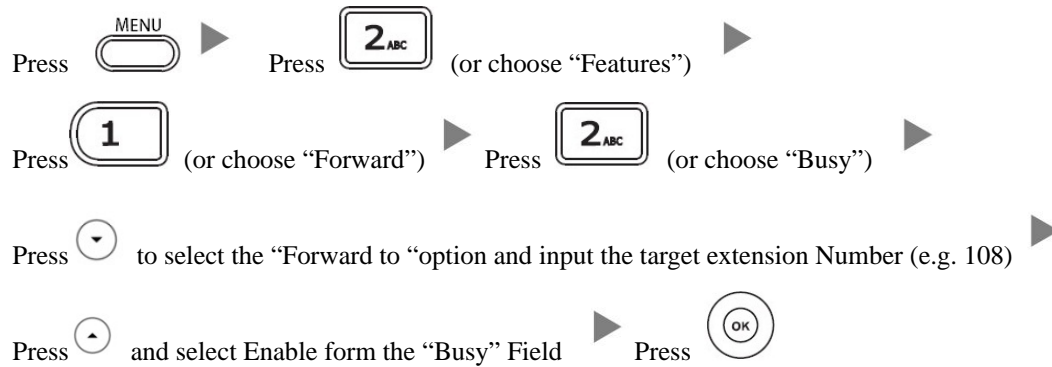 

iii. To set up the Always mode

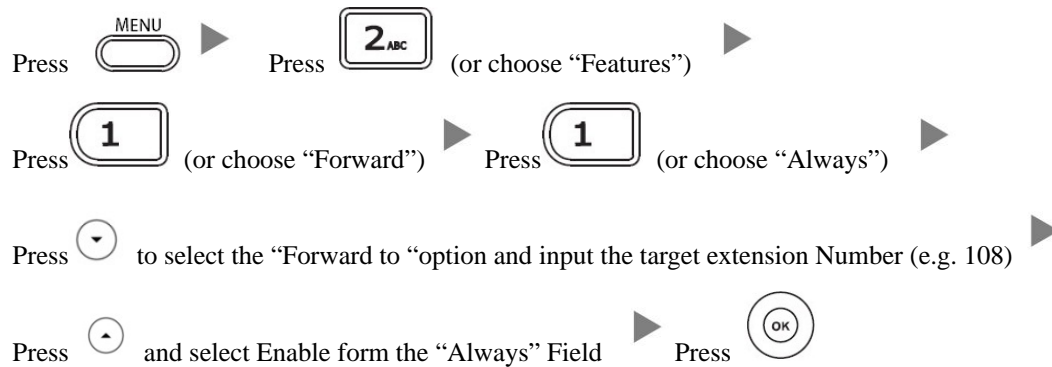 

iv. To Cancel Calls Forwarding

